




DAL LAGO TTC S.R.L. - Via Piave, 16 - 36077 Altavilla Vic.na (VI) - Italy  
Tel +39 0444 349030 - Fax +39 0444 348964 - [www.dallago.it](http://www.dallago.it) - [info@dallago.it](mailto:info@dallago.it)

## **SCHÜTTE SD50 - SD63**

**APPARECCHIATURE E PARTI DI RICAMBI**

**ATTACHMENTS AND SPARE PARTS**

**EINRICHTUNGEN UND ERSATZTEILE**

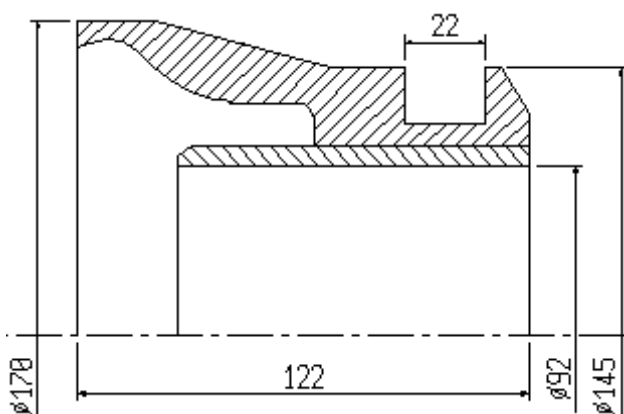

S5/001  
campana / sleeve  
SD50c376



S5/003  
martelletto / toggle  
VD63d390a



S5/057  
albero / shaft  
SD50c670c



S5/055  
albero / shaft  
SD63c670f



S5/051  
albero / shaft  
SD50c671e




S5/054  
albero / shaft  
SD63c671g




S5/050  
albero / shaft  
672




S5/056  
albero / shaft  
SD63c672f

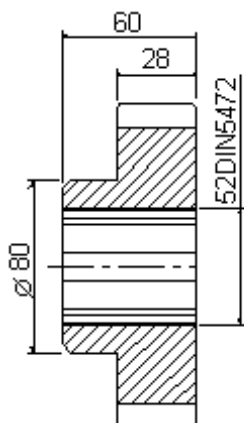


S5/061  
Z39 ingranaggio /gear  
SD50d689a

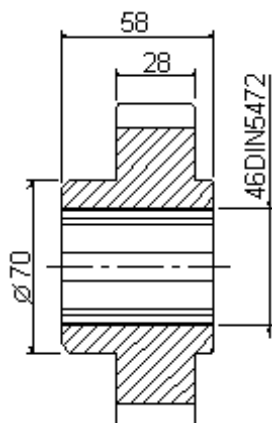


S5/060  
Z51 ingranaggio /gear  
SD50d690a

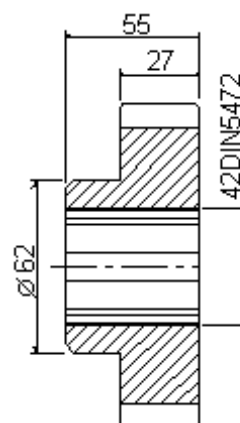


S5/059  
Z40 ingranaggio /gear  
SD50d688b

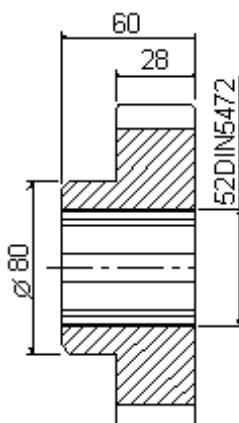


S5/063  
Z46 ingranaggio /gear  
SD50d685a

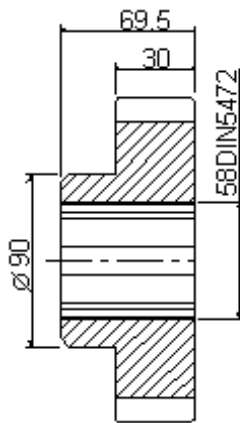


S7/054  
Z52 ingranaggio /gear  
685

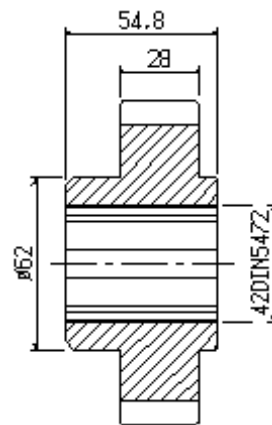

S5/052  
Z40 ingranaggio /gear  
706

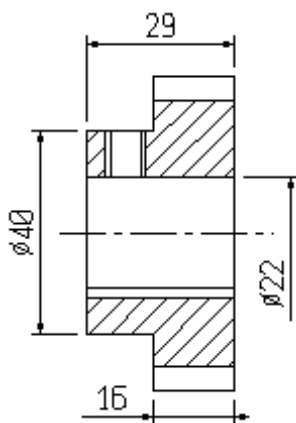


S5/058  
Z23 ingranaggio /gear  
SD63d1069

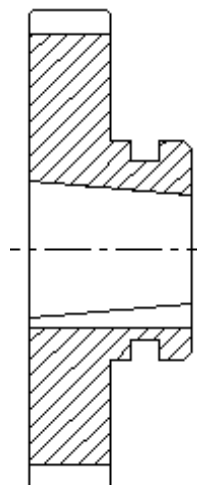


ITS4  
ingranaggio tempi / feed gear


IVS5  
ingranaggio giri / speed gear

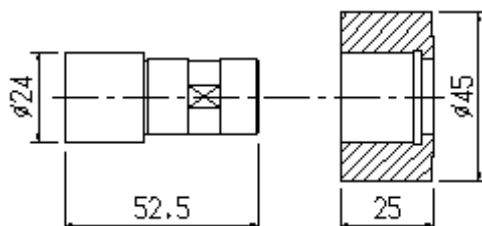

S5/030P (186)  
perno / pin

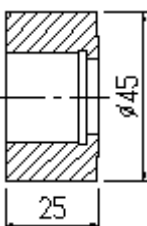


S5/030R  
rullo / roller

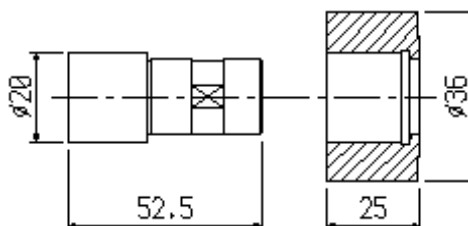


S5/031P (523)  
perno / pin


S5/031R (522)  
rullo / roller

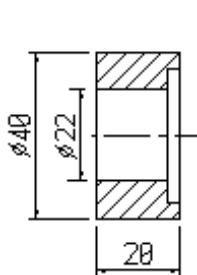


S5/033R  
rullo / roller

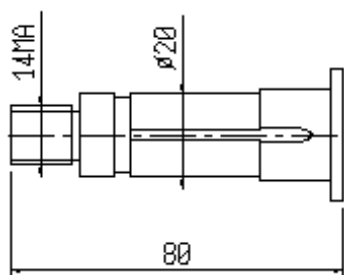


S5/033P  
perno / pin  
VD63d851

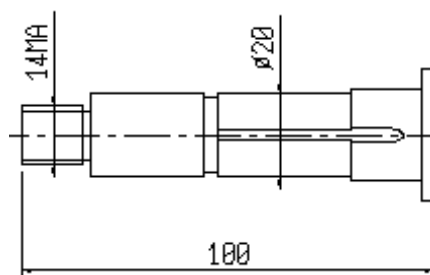


S5/034P  
perno / pin

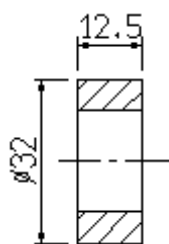


S5/036R  
rullo / roller

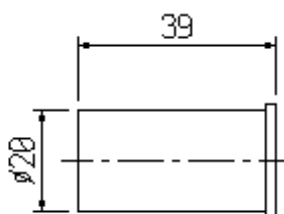


S5/036P  
perno / pin

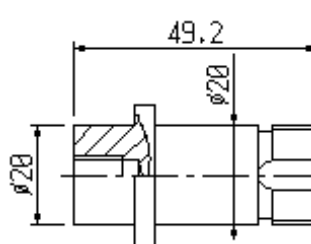

S7/030P (612)  
perno / pin

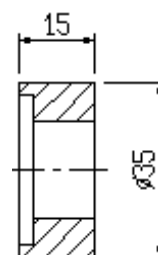


S7/030R (615)  
rullo / roller

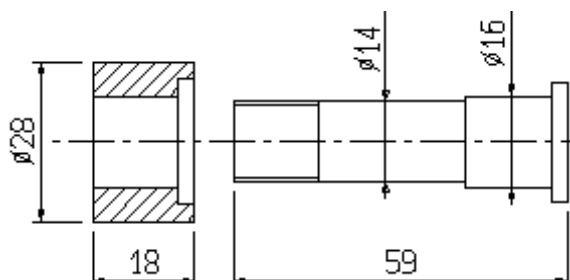


S5/032R (90)  
rullo / roller


S5/032P (89)  
perno / pin

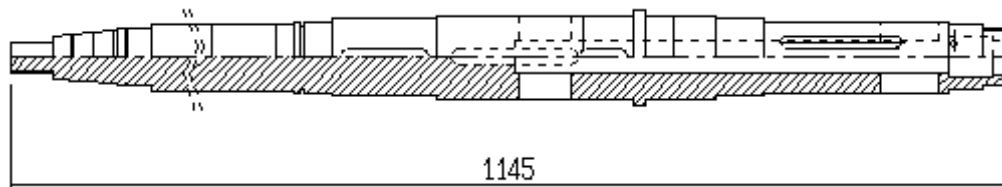


S5/053  
Albero portafrizione / clutch-shaft  
SD50d657d

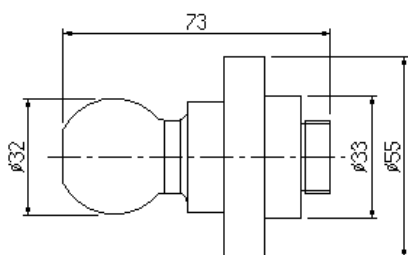

S5/039  
ginocchiera / pivot

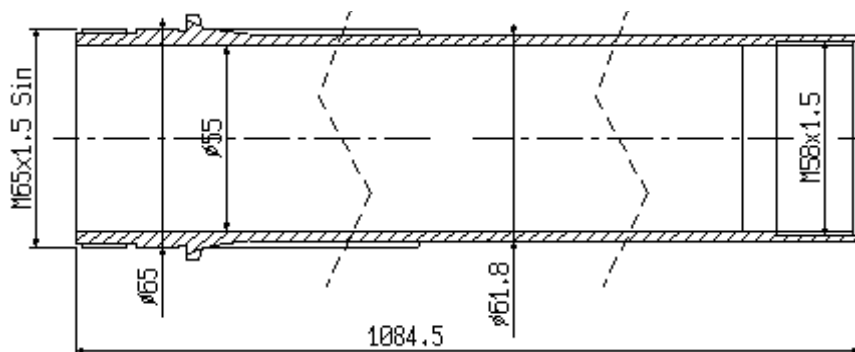

S5/012  
tubo avanzamento / feed tube

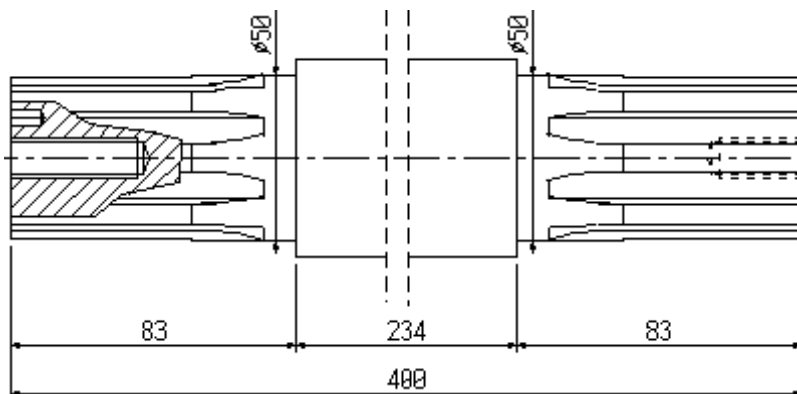

S5/064  
albero / shaft  
673